

# Yeti pro



Ultimate USB & XLR Microphone  
for Professional Recording





Congratulations on your purchase of Yeti Pro, the first microphone to combine the exceptional detail of 192kHz/24 bit USB audio recording with the ability to output to traditional analog audio equipment. Yeti Pro is the ultimate tool for creating amazing recordings, no matter what the sound source, environment, or destination. Yeti Pro features Blue's innovative triple capsule array, allowing for recording in stereo or your choice of three unique patterns, including cardioid, omnidirectional, and bidirectional, giving you recording capabilities typically requiring multiple microphones. The Yeti Pro can connect to any analog equipment with a phantom powered XLR connection, or directly to your computer via USB, eliminating the need for any additional audio interface equipment.

For digital recording, Yeti Pro utilizes a high quality 192kHz/24-bit analog-to-digital converter to send remarkable audio fidelity directly into your computer, while a built-in headphone amplifier provides for zero-latency monitoring. Simple controls for headphone volume, pattern selection, instantaneous mute, and microphone gain are located directly on the microphone so you are always in control of your recording. Yeti Pro's next generation design provides incredibly low distortion, high fidelity, and balanced frequency response.

## GETTING TO KNOW YOUR YETI PRO

4

**TRIPLE CAPSULE ARRAY** • Three condenser capsules in an innovative configuration to enable great recordings in most any situation.

**MULTIPLE PATTERN SELECTION** • You can quickly select from each of Yeti's four pattern settings (stereo, cardioid, omnidirectional, bidirectional) by simply rotating the pattern selector knob. See pages 21-26 for more details and pattern suggestions.

**MICROPHONE GAIN** • Use this knob to control the gain (sensitivity) of Yeti Pro's microphone elements. When recording in USB mode, begin recording with this knob centered. If you are experiencing digital distortion with a very loud sound source, simply decrease the gain counterclockwise. If you desire higher sensitivity, simply increase the gain by turning clockwise.

When recording using the analog outputs, we recommend the microphone gain on the Yeti Pro to be turned to zero, or all the way counterclockwise. If more gain is desired you can rotate the knob clockwise to increase the microphone's

sensitivity. However, in analog mode, Blue recommends making gain adjustments in your preamplifier or interface equipment to minimize the chance of distortion.

**BLUE LOGO** • The Blue logo indicates the front of the microphone.

**SET SCREWS** • Turn each of these knobs clockwise to tighten and secure the microphone at the desired angle. To remove the microphone from the included desk stand, simply unscrew both set screws entirely while supporting the microphone with your hand. Carefully remove the Yeti Pro microphone by lifting directly up and out of the desk stand.

**MUTE BUTTON/STATUS LIGHT** • Press this button to mute the output from the microphone. When the mute button is flashing, the microphone is muted and no signal will be sent to the computer. To end microphone muting, simply press the button again. The status light will illuminate solid during normal operation to indicate proper function.

**NOTE: THE MUTE BUTTON IS NOT FUNCTIONAL WHEN USING THE YETI PRO IN ANALOG MODE.**

5

**NOTE: HEADPHONE OUTPUT AND VOLUME CONTROL IS NOT FUNCTIONAL WHEN USING THE MICROPHONE IN ANALOG MODE DUE TO THE INSUFFICIENT POWER PROVIDED BY XLR INTERFACES.**

**HEADPHONE VOLUME CONTROL** • Control the volume of Yeti Pro's headphone output by adjusting the volume knob – no need to click through software menus to find the right headphone volume. Yeti Pro's headphone volume control is a digital volume control, so most operating systems will remember the volume position from previous use.

**HEADPHONE OUTPUT** • Yeti Pro includes a standard 1/8" (3.5mm) headphone jack for monitoring and playback. You can use Yeti Pro's headphone output to monitor your microphone recording in real-time, without latency delays. Or, use the Yeti Pro's headphone amplifier to play back music, movies, or tracks from your computer with the incredible fidelity and detail provided by Yeti Pro's dedicated headphone amplifier and high quality digital-to-analog converter.

**USB CONNECTION** • Yeti Pro supports USB audio class 2.0. For proper function, Mac users need to install OS 10.6.4 or higher, and Windows users will need to download the Yeti Pro driver from [www.bluemic.com/yetiopro](http://www.bluemic.com/yetiopro). Yeti Pro connects to your computer with one simple USB cable. Plug the mini USB (small connector) into the USB port

on Yeti Pro, and plug the other end into an available USB port on your computer. To perform at its best, Yeti Pro should be plugged directly into a powered USB port, so avoid connecting through USB hubs or other USB multipliers.

**5-PIN XLR CONNECTOR** • On the bottom of Yeti Pro, you will find a male 5-Pin XLR connector. Plug in the included Y-Cable to connect Yeti Pro to a standard microphone preamplifier(s) via standard XLR connectors, or use your own 5 pin stereo XLR cable to connect the Yeti Pro to a stereo preamplifier. Yeti Pro's included y-cable outputs stereo audio via the left and right XLR connectors when the mic is in stereo mode. When Yeti Pro is used in the other modes, the mono signal is cloned and output to left and right XLR connectors.

**NOTE: YETI PRO IS NOT CAPABLE OF SIMULTANEOUS ANALOG AND DIGITAL OPERATION. TO ENSURE PROPER OPERATION, ONLY CONNECT THE DIGITAL (USB) OR ANALOG (XLR) CONNECTORS AT ANY GIVEN TIME. IN THE EVENT YETI PRO BECOMES UNRESPONSIVE, SIMPLY UNPLUG ALL CONNECTIONS FOR 10 SECONDS AND RE-CONNECT YOUR YETI PRO WITH THE DESIRED OUTPUT CABLE.**

**STANDARD THREAD MOUNT** • If you would like to mount your Yeti Pro to a standard microphone studio mount, remove Yeti Pro from the included desk stand and thread the barrel into any standard threaded mount for maximum versatility.

## GETTING STARTED WITH YETI PRO (DIGITAL USB OUTPUT)

After unpacking your Yeti Pro, rotate the microphone 180 degrees so that the Blue logo and headphone volume control is facing you. Tighten the set-screws on the left and right of the base after adjusting the microphone for your desired angle. Connect the Yeti Pro to your computer with the supplied USB cable (avoid plugging Yeti Pro into USB hubs or multipliers – plug directly into your computer for best performance). See below for installation instructions specific to your operating system:

### Windows 7 and Windows Vista

Plug in your Yeti Pro Microphone using the provided USB cable, then visit [www.bluemic.com/yetiopro](http://www.bluemic.com/yetiopro) to download the appropriate driver for Windows Vista or Windows 7.

1. Download the "Yeti Pro USB 2.0 Driver" from [www.bluemic.com/yetiopro](http://www.bluemic.com/yetiopro) to your computer's hard drive.
2. Double click the "Yeti Pro USB 2.0 Driver.exe" file.
3. Plug in your Yeti Pro microphone and follow the instructions in the installation wizard to install the Yeti Pro USB 2.0 Driver.

After the Yeti Pro USB 2.0 driver has been successfully installed:

1. Plug the microphone into the USB port on your computer using the provided USB cable.
2. From the Start menu, select the "Control Panel".
3. From the Control Panel, select the "Sound" icon.
4. Select the "Recording" tab. Select the "Yeti Pro Stereo Microphone" from the list.

From this screen, you'll want to adjust the computer's internal microphone gain (volume) settings. Select the "Properties" button, then select the "Levels" tab. As a starting point, set the microphone fader at about 80% of full level. If you decide

you want to record something that is very loud, like a drum set, or a band practice, you will want to turn this setting down. If you are recording something that may be quiet, like an interview with a person who speaks softly, you may want to turn this setting up.

5. Select the "Playback" tab. Select the "Yeti Pro Stereo Microphone" from the list.

From this screen, you will also want to adjust the computer's master volume. As a starting point, set the computer's master volume to 100%. Once you've selected the Yeti Pro as your output device, you can control headphone volume with volume knob on the front of the Yeti Pro.

Also, from this screen, you will want to adjust the microphone monitoring volume. You can adjust this by moving the fader labeled "microphone" to the left or to the right.\*

\*NOTE: The microphone monitoring volume is different than the microphone gain control. The microphone monitoring volume is the amount of sound from the microphone that is sent to your main computer output. The microphone input volume is the control that determines the amount of sound output from the microphone that goes into your computer. If the microphone input is distorting, the microphone input volume should be adjusted accordingly.

#### Quick notes on sampling rates:

The sampling rate refers to the resolution at which analog audio is converted into digital data by Yeti Pro's analog-digital converter. Higher sampling rates will 'sample' and convert the analog signal more often than a lower sampling rate over a given period of time, more accurately capturing the original sound but creating proportionally more data to be captured by the computer.

Yeti Pro is capable of sampling rates from 22kHz to 192kHz, allowing for more than four times the resolution of a typical CD recording (44kHz). Sampling rates should be selected based on the capabilities of your system, the nature of the recording, and the eventual output for your work. For instance, if your recordings are destined for a CD, you would prefer to record at an even multiple of the final sampling rate (88.2kHz or 176.4kHz) while recordings that will be digitally compressed will generally benefit from the highest rate possible. Furthermore, higher sampling rates are most beneficial in capturing the realism of high frequency, rapid sounds (like cymbals) and enhancing the image of stereo recordings. Keep in mind that high sampling rates combined with Yeti Pro's stereo output can create very large data files very quickly, so keep an eye on your hard disk space and work files.

## Selecting the Sampling Rate and Bit Depth in Windows Vista and Windows 7

### For Input:

1. Plug in your Yeti Pro Microphone.
2. Go to your computer's control panel.
3. From the control panel, select the "Hardware & Sound" option.
4. From the "Hardware & Sound" menu, select the "Sound" icon.
5. From the "Sound" menu, select the "Recording" tab.
6. Select the "Yeti Pro Stereo USB Microphone" from the list of input devices.
7. Click on "Properties".
8. Select the "Advanced" tab from the "Properties" window.

Important note for users of Skype or other voice chat applications: Blue does not recommend using the Yeti Pro's Headphone Output to power external speakers. Doing so could result in unpleasant feedback and poor conversation quality. Blue recommends driving any external speakers with your computer's headphone or speaker-out port.

9. Select your desired sample rate from the "Default Format" pull down menu.\*\*

### For Output:

1. Plug in your Yeti Pro Microphone.
2. Go to your computer's control panel.
3. From the control panel, select the "Hardware & Sound" option.
4. From the "Hardware & Sound" menu, select the "Sound" icon.
5. From the "Sound" menu, select the "Playback" tab.
6. Select the "Yeti Pro Stereo USB Microphone" from the list of output devices.
7. Click on "Properties".
8. Select the "Advanced" tab from the "Properties" window.

9. Select your desired sample rate from the Default Format pull down menu\*\*

\*\*NOTE: Sample Rate settings must be the same for both input and output.

#### Windows XP

Plug in your Yeti Pro Microphone using the provided USB cable, then visit [www.bluemic.com/yetipro](http://www.bluemic.com/yetipro) to download the appropriate driver for Windows Vista.

1. Download the "Yeti Pro USB 2.0 Driver" from [www.bluemic.com/yetipro](http://www.bluemic.com/yetipro) to your computer's hard drive.
2. Double click the "Yeti Pro USB 2.0 Driver.exe" file.
3. Follow the instructions in the installation wizard to install the Yeti Pro USB 2.0 Driver.

After the Yeti Pro USB 2.0 driver has been successfully installed:

1. Plug the microphone into the USB port on your computer using the provided USB cable.

2. From the start menu, select the control panel.
3. From the control panel, select the "Sounds and Audio Devices" icon.
4. Select the "Audio" tab.
5. Select "Yeti Pro Stereo Microphone" from the "Sound Playback" pull-down menu.
6. Select the "Volume" button within the "Sound Playback" area.

From this screen, you will want to adjust the microphone monitoring volume.\* If there is NOT a visible fader for microphone output, select "Properties" from the "Options" menu. Make sure that the box labeled "Microphone," within the "Show the following volume controls" window, is checked.

\*NOTE: The microphone monitoring volume is different than the microphone gain control. The microphone monitoring volume is the amount of sound from the microphone that is sent to your main computer output. The microphone input volume is the control that determines the amount of sound from the microphone that goes into your computer. If the microphone input is distorting, the microphone input volume should be adjusted accordingly.



From this screen, you will also want to adjust the computer's Master Volume. As a starting point, set the computer's master volume to 100%. Once you've selected the Yeti Pro as your output device, you can control headphone volume with volume knob on the front of the Yeti Pro.

7. Select "Yeti Pro Stereo Microphone" from the Sound Recording pull-down menu.
8. Select the Volume button within the Sound recording area.

From this screen, you'll want to adjust the computer's internal microphone gain (volume) settings. As a starting point, set the microphone fader at about 80%. If you want to record something that is very loud, like a drums or a band practice, you'll want to turn this setting down. If you are recording something quiet, you may want to turn this setting up.

#### Selecting Sample Rates using Windows XP

Selecting samples rates in Windows XP is completely software dependent. Please reference the documentation included in your recording software for information regarding sample rate selection. The default sample rate for Windows XP is 48 kHz.

#### Apple-Macintosh OSX (10.6.4 or higher)

1. Plug the microphone into your computer's USB port using the provided USB cable.
2. From the main Apple menu, select the "System Preferences".
3. Select the "Sound" icon.
4. Now select the Input tab and select "Yeti Pro Stereo Microphone."

As a starting point, set the Input Volume to about 80%. If you decide you want to record something that is very loud, like a drums or a band practice, you will want to turn this setting down. If you are recording something that may be quiet, like an interview with a person who speaks softly, you may want to turn this setting up.

5. Select the output tab and select "Yeti Pro Stereo Microphone".
6. From this screen, you will want to set the "Output Volume" to 100%. Once you've selected the Yeti as your output device, you can control the headphone volume with the knob on the front of the Yeti Pro.

Now that your Yeti Pro is connected, verify that the microphone gain knob is centered, select your desired recording pattern, and get ready to record.

#### Selecting Sample Rates on Apple-Macintosh

1. From the Applications menu, select "Utilities".
2. From the Utilities menu, select "Audio MIDI Setup".
3. From the Window pull down menu, select "Show Audio Window".
4. Select "Yeti Pro USB Microphone" from the column on the left side of the Audio Window.
5. Once you've selected "Yeti Pro USB Microphone" from the left side of the Audio Window, select the "Input" tab.
6. From the Input tab, you can select the desired sample rate and bit depth.
7. Select the Output tab, and select your desired output sample rate and bit depth.\*\*

\*\*NOTE: Sample Rate settings must be the same for both input and output.

#### Using Yeti Pro in Analog Mode

Not only can you plug your Yeti Pro directly into your computer to record high fidelity recordings, but you can also plug Yeti Pro into a phantom power-capable microphone preamplifier and record as you would a standard microphone! To use Yeti Pro in Analog Mode, you will need to plug the supplied Y-cable into the 5 pin connector at the bottom of the Yeti Pro microphone. If you are going to use the Yeti Pro in Stereo, you will need two microphone preamplifiers (or a two channel preamp). As with all other stereo recordings, using matched preamplifiers will provide the best results. The white XLR connector on the Y-cable carries the left channel signal, and the red XLR connector on the Y-cable carries the right channel signal. If you are recording in Cardioid, Omnidirectional, or Bidirectional, you'll only need to plug in the white (left) XLR connector into a preamplifier (both channels will output the same signal).

Once you've plugged the Yeti Pro into your microphone preamplifier(s), set the microphone gain on the microphone to zero. Once you're plugged into your preamplifier(s), you'll want to control the gain with your microphone preamplifier(s) as opposed to the gain on the Yeti Pro microphone.

**NOTE: THE HEADPHONE VOLUME CONTROL AND INSTANTANEOUS MUTE ARE DIGITAL CONTROLS AND ARE, THEREFORE, NOT FUNCTIONAL WHEN USING THE YETI PRO IN ANALOG MODE. BLUE RECOMMENDS MONITORING YOUR RECORDING DIRECTLY FROM YOUR PREAMPLIFIER OF CHOICE, FOR SIMPLE, NO-LATENCY MONITORING.**

Please note that the Yeti Pro does not operate in digital and analog mode simultaneously. To ensure proper operation, connect only the analog (XLR) or digital (USB) connections at any given time. If Yeti Pro becomes unresponsive, simply unplug all connections for 10 seconds, and reconnect with your desired output connector.

### SO WHAT CAN I DO WITH YETI PRO?

In short, anything! Remember that there are no rules in recording – only guidelines. If it sounds good, then it is good! On the following pages we've provided suggested uses and a description for each of the recording modes (patterns) available and how you can use them to get great results, every time. If this all seems a bit much, just remember you can always try a recording while switching through each of the recording modes to dial in your favorite sound.

## RECORDING MODES AT A GLANCE

PATTERN MODE	PATTERN SETTING SYMBOL	SOUND SOURCE / DIRECTION	RECORDING APPLICATIONS			
<b>STEREO</b>			vocals	ensemble choir	instruments	
<b>CARDIOID</b>			podcasts	voiceovers	vocals	instruments

## RECORDING MODES AT A GLANCE


22

PATTERN MODE	PATTERN SETTING SYMBOL	SOUND SOURCE / DIRECTION	RECORDING APPLICATIONS
<b>OMNIDIRECTIONAL</b>			<i>conference calls</i> <i>field recordings</i> <i>events/archestras</i> 
<b>BIDIRECTIONAL</b>			<i>interviews</i> <i>instruments</i> <i>vocal duets</i> 

## STEREO

23

Description: The Stereo mode is great for capturing a realistic stereo image. To start, point the microphone at the sound source that you want to record (the "front" of the microphone is the side of the microphone with the Blue Microphones Logo). Depending on the instrument and/or sound that you want to achieve, place the grill of the microphone anywhere from 2 inches to several feet in front of the sound source. By centering the sound source, you will get equal amounts of signal in both the left and right channels. If you want a little more of the signal in the right channel, move the sound source a little to the right side of the mic (as if one is behind the microphone), and if you want a little more of the signal in the left channel, move the sound source to the left (as if you are behind the microphone). Alternatively, you can record everything as centered as possible, and easily adjust the position when you're mixing the recording. If you want the sound in the right or left channel only, you should try using the cardioid, bidirectional or the omnidirectional setting, and use your software to hard-pan the sound to the left or the right.

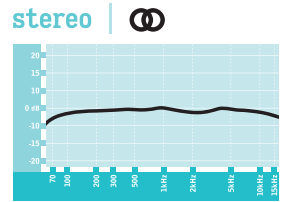


These charts are only a starting point for the sound provided. How the microphone reacts in a particular application will differ greatly because of many variables, like room acoustics, distance from sound source (proximity), timing of instruments, mic cabling and other factors. For more tips on mixing and recording techniques, check out the Blue website.

## CARDIOID

Description: Cardioid is the most commonly used mode and can be useful in most any situation. If you are recording vocals, a podcast, or a voiceover, cardioid is likely your best choice. When recording in cardioid, sound directly in front of the microphone is picked up while the sound at the rear and sides of the microphone is not picked up. Therefore, you will want to arrange the source directly in front of the microphone. Cardioid will deliver the most direct, rich sound, but will not offer as much airiness or presence as the other recording modes.

24

### cardioid |

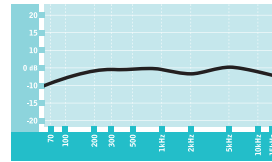


These charts are only a starting point for the sound provided. How the microphone reacts in a particular application will differ greatly because of many variables. Like room acoustics, distance from sound source (proximity), timing of instruments, mic cabling and other factors for more tips on mixing and recording techniques, check out the Blue website.

## OMNIDIRECTIONAL

Description: Omnidirectional means that the microphone picks up sound equally from all directions. This setting is perfect for recording a group of musicians all playing at the same time, recording a conversation between multiple parties around a room, a conference call, or any other situations where you want to capture the ambience of "being there." Because sound is picked up from all directions in this mode, the orientation of the microphone isn't crucial, but as a good rule of thumb, start by orienting the front of the microphone at the primary sound source you wish to record.

25


### omni |

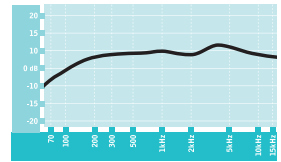

These charts are only a starting point for the sound provided. How the microphone reacts in a particular application will differ greatly because of many variables. Like room acoustics, distance from sound source (proximity), timing of instruments, mic cabling and other factors for more tips on mixing and recording techniques, check out the Blue website.

## BIDIRECTIONAL

Description: Bidirectional means that the microphone picks up sound at the front and rear of the microphone, while the sounds to the sides are "rejected", or not picked up. The bidirectional setting is very useful in achieving a nuanced, pleasant sound when recording musical instruments, and is perfect for recording an interview with two or more guests. By placing the microphone between two or more subjects (front of microphone facing one source, rear of microphone facing another), you can achieve a natural sound without the complexity of using multiple microphones.

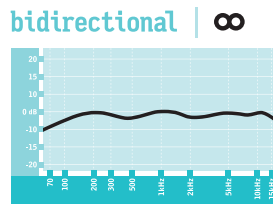

These charts are only a starting point for the sound provided. How the microphone reacts in a particular application will differ greatly because of many variables. Like room acoustics, distance from sound source (proximity), timing of instruments, mic cabling and other factors for more tips on mixing and recording techniques, check out the Blue website.

26

## SPECIFICATIONS

### Microphone and performance

**Power Required/Consumption:** 5V 500mA (USB) / 48V DC phantom power (Analog)

**Sample Rate:** 22kHz to 192kHz

**Bit Rate:** 24bit

**Capsules:** 3 Blue-proprietary 14mm condenser capsules

**Polar Patterns:** Stereo, Cardioid, Bidirectional, Omnidirectional

**Frequency Response:** 20Hz - 20kHz

**Sensitivity:** 4.5mV/Pa (1 kHz)

**Max SPL:** 120dB (THD: 0.5% 1kHz)

**Headphone Amplifier**

**Impedance:** >16 ohms

**Power Output (RMS):** 130mW

**THD:** 0.009%

**Frequency Response:** 15Hz - 22kHz

**Signal to Noise:** 114dB

### Specifications

**Dimensions (extended in stand):** 4.72" (12cm) x 4.92" (12.5cm) x 11.61" (29.5cm)

**Weight (microphone):** 1.2lbs (.55kg)

**Weight (stand):** 2.2lbs (1kg)

**Cable:** 12" Y-Cable (1 stereo XLR and two monoaural XLR connectors) and 9-foot shielded USB Cable

### System Requirements

**PC:** Windows 7, Windows Vista, XP Home Edition or XP Professional (all Windows systems require driver installation prior to use)

**USB 2.0 High Speed; 256 MB RAM (minimum)**

**Macintosh:** Mac OSX (10.6.4 or higher)

**USB 2.0 High Speed; 256 MB RAM (minimum)**

27

## WARRANTY

Blue Microphones warrants its hardware product against defects in materials and workmanship for a period of TWO (2) YEARS from the date of original retail purchase, provided the purchase was made from an authorized Blue Microphones dealer. This warranty is void if the equipment is altered, misused, mishandled, maladjusted, suffers excessive wear, or is serviced by any parties not authorized by Blue Microphones. The warranty does not include transportation costs incurred because of the need for service unless arranged for in advance. Blue Microphones reserves the right to make changes in design and improve upon its products without obligation to install these improvements in any of its products previously manufactured. For warranty service or for a copy of Blue's Warranty Policy including a complete list of exclusions and limitations, contact Blue at 818-879-5200.

©2011 Blue Microphones. All Rights Reserved. Yeti Pro and Blue Oval Logo are registered trademarks of Blue Microphones. Macintosh is a registered trademark of Apple, Inc., registered in the US and other countries. Windows, Windows 7, Windows Vista and Windows XP are registered trademarks of Microsoft, Inc. Skype is a registered trademark of Skype Limited. All rights reserved.

In keeping with our policy of continued product improvement, Baltic Latvian Universal Electronics (BLUE) reserves the right to alter specifications without prior notice.



Designed in U.S.A. Made in China.



[www.bluemic.com](http://www.bluemic.com)

